

DRIVER UTILITY CDR_MD-591X Driver 1.0

All rights reserved. Copyright 2014

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is UTILITY --> VGA --> LAN --> Audio --> Touch --> WLAN

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\
|

+---->\Flash BIOS\6120L.bat

|
|

+---->\Platform\WIN7,WES7(32-bit)\Utility\Setup.exe (Intel Chipset

Software Installation Utility only for windows OS)

|
|

+---->\Platform\WIN7,WES7(32-bit)\VGA\Setup.exe (Intel GMA3600

Driver only for windows OS)

|
|

+---->\Platform\WIN7,WES7(32-bit)\LAN\PROWin7_32_18.7.exe (IntelR

82583V Gigabit Ethernet Controller Driver only for windows OS)

|
|

+---->\Platform\WIN7,WES7(32-bit)\Audio\32bit_Vista_Win7_Win8_R271.exe

((Realtek ALC888S HD Audio Driver only for windows OS)

|
|

+---->\Device\Touch\eGalaxTouch_5.13.0.12328-Release-140128\Setup.exe(eGalaxTo
uch Driver only for windows OS)

MANUAL\

+---->\AdbeRdr930_en_US.exe (PDF File reader)

=====
=====

This CD contains

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

a. This is found in CD:\Driver\Flash BIOS\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE and "BIOS ROM file

(ex.591Xxxxx.rom) (*the flash drive need 4MB free space.)

b. Use flash drive to boot, then type " afudos 591Xxxxx.rom /p /b /n /x "
and press enter to automatically flash BIOS.

(ex. C:\>afudos 591X0P02.rom /p /b /n /x <enter>)

2. Intel Chipset Software Installation Utility.(IntelR System Controller Hub NM10 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Win7,WES7(32-bit)

3. The VGA interface (Intel(R) GMA3600 Graphics) is with our system to support LVDS display.

The following illustration briefly shows you the content of VGA driver in sub-directory \VGA\

a. for Win7,WES7(32-bit)

4. The system has LAN function (IntelR 82583V Gigabit Ethernet LAN Controller) that can support

various network adapters. The content of the LAN driver is found as follows:

a. for Win7,WES7(32-bit)

5. The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Win7,WES7(32-bit)

6. eGalaxTouch Driver

a. for Win7,WES7(32-bit)

7. Adobe Acrobat Reader 9.3

a. for Win7,WES7(32-bit)

Revision History

2014/08/04 Release CDR_MD-591X Driver_V1.0

** Third party trademarks or brand names are the property of their owners.**