

DRIVER UTILITY PA-3100 V10.1

All rights reserved. Copyright 2014

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is Mainchip --> VGA --> LAN --> SOUND --> TOUCH

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\---->\Flash BIOS\AFU.bat

|
|

+---->\Plaform\XP,POSReady2009 (32-bit)\Main Chip\infinst_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

+---->\Plaform\Win7,POSReady7(32-bit)\Main Chip\infinst_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

|
|

+---->\Plaform\XP,POSReady2009 (32-bit)\VGA\Setup.exe (WINXP ,POS

Ready 2009 DRIVER)

+---->\Plaform\Win7,POSReady7(32-bit)\VGA\Setup.exe (WIN7 32bit

DRIVER)

|
|

+---->\Plaform\XP,POSReady2009 (32-bit)\LAN\Realtek

RTL8111DL\setup.exe (WINXP ,POS Ready 2009 DRIVER)

+---->\Plaform\Win7,POSReady7(32-bit)\LAN\Realtek

RTL8111DL\Setup.exe (WIN7 32bit DRIVER)

|
|

+---->\Plaform\XP,POSReady2009 (32-bit)\SOUND\WDM_R265.exe

(WINXP ,POS Ready 2009 DRIVER)

+---->\Plaform\Win7,POSReady7(32-bit)\SOUND\Vista_Win7_R265.exe

(WINVISTA/7 32bit and 64bit DRIVER)

|
|

+---->\Device\Touch Screen\Win2K_XP_VISTA_7\Setup.exe (WINXP ,POS

Ready 2009, WIN_7_32_64bit DRIVER)

API Package\---+---->\DEMO PROJECT\

|
|

+---->\ProxAPI standard\
|

|
|

+---->\Document\
|

User Manual\AdbeRdr930_en_US.exe (PDF File reader)

=====
=====

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:\Flash\AFU.bat

BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT and "BIOS ROM file

(ex.3100XXXX.ROM)" (*the flash drive need 2MB free space.)

b. Use flash drive to boot, then type "AFU 3100XXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 3100P01.ROM <enter>)

2. The system has LAN function (Realtek RTL8111DL) that can support various network adapters. The content of the LAN driver is found as follows:

a. Windows XP_32_64bit/Vista_32_64bit/7_32_64bit

3. The Realtek ALC888 HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

a. Windows XP_32_64bit/Vista_32_64bit/7_32_64bit

4. The UTILITY directory is contained in CD-ROM for INTEL N270 Driver

a. Windows XP_32_64bit/Vista_32_64bit/7_32_64bit

5. The VGA interface (Intel(R) Graphics Media Accelerator 3150) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows XP_32_64bit/Vista_32_64bit/7_32_64bit

**** Third party trademarks or brand names are the property of their owners.****

20140108-->RA Version to RB Version

1.LAN Chip

2.Touch Controller

20120724-->update ID-TECH MSR OPOS Driver for Win7 Series & Labau OPOS Driver
V2.6

20120502-->update SII printer control board RS232 interface1 baud rate tools

20120409-->Printer Driver Update SII & Labau Driver