

DRIVER UTILITY SP-6120 Driver 1.3

All rights reserved. Copyright 2013

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is UTILITY --> VGA --> LAN --> SOUND --> Touch

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\
|

- +---->\Flash BIOS\Win7_x86(800x600)\AFU.bat
- +---->\Flash BIOS\Win7_x86(1024x768)\AFU.bat
- +---->\Flash BIOS\WinXP_x86(800x600)\AFU.bat
- +---->\Flash BIOS\WinXP_x86(1024x768)\AFU.bat

|
|

+---->\Platform\Win7,POSReady7(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\VGA\Setup.exe (Intel GMA3600 Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\VGA\1024x768\WindowsDriverSETUP.bat (Intel GMA3600 Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\VGA\800x600\WindowsDriverSETUP.bat (Intel GMA3600 Driver only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\LAN\PCIE_Install_5800_09202012\Setup.exe (Realtek RTL8111F GIGA-LAN Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\LAN\PCIE_Install_5800_09202012\Setup.exe (Realtek RTL8111F GIGA-LAN Driver only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\Audio\Setup.exe ((Realtek ALC888S HD Audio Driver only for windows OS)

+---->\\Platform\WinXP,POSReady2009(32-bit)\Audio\Setup.exe ((Realtek ALC888S HD Audio Driver only for windows OS)

|
|

+---->\Device\Touch\eGalaxTouch\Setup.exe(eGalaxTouch Driver only for windows OS)

|
|

+---->\Device\Wifi Module\Spark LAN\WPER-116GN\Setup.exe(PER-116GN Driver only for windows OS)

+---->\Device\Wifi Module\ZQ802XRN7-01\Setup.exe(ZQ802XRN7-01 Driver only for windows OS)

MANUAL\

+---->\AdbeRdr930_en_US.exe (PDF File reader)

API Package\

+---->\DEMO PROJECT\

|
|

+---->\ProxAPI standard\

|
|

+---->\Document\
=====

=====
This CD contains

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:\Driver\FIash BIOS\Win7_x86(800x600)\AFU.bat
- b. This is found in CD:\Driver\FIash BIOS\Win7_x86(1024x768)\AFU.bat
- c. This is found in CD:\Driver\FIash BIOS\WinXP_x86(800x600)\AFU.bat
- d. This is found in CD:\Driver\FIash BIOS\WinXP_x86(1024x768)\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE and "BIOS ROM file

(ex.6120xxxx.rom) (*the flash drive need 4MB free space.)

b. Use flash drive to boot, then type " afudos 6120xxxx.rom /p /b /n /x "
and press enter to automatically flash BIOS.

(ex. C:\>afudos 61200PH8.rom /p /b /n /x <enter>)

2 The system has LAN function (Realtek RTL8111F Gbe Lan) that can support various network adapters. The content of the LAN driver is found as follows:

- a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

3 The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

4 Intel Chipset Software Installation Utility.(IntelR System Controller Hub NM10 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

5 The VGA interface (Intel(R) GMA3600 Graphics) is with our system to support LVDS/DVI-I/CRT display.

The following illustration briefly showa you the content of VGA driver in sub-directory \VGA\

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

6 eGalaxTouch Driver

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

7 Adobe Acrobat Reader 9.3

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

Revision History

2013/06/07 Release CDR_SP-6120 Driver 1.0

2013/08/20 Release CDR_SP-6120 Driver 1.1

- 1.Add XP Driver
- 2.Add Wifi Driver-WPER-116GN
- 3.Update API package Ver: A01-0000-000-02-130729

2014/03/27 Release CDR_SP-6120 Driver 1.2

1. Update BIOS: 61200DH4.rom for WinXP(1024x768)
2. Update BIOS: 61200PH8.rom for Win7(1024x768)
3. Update BIOS: 61200DL4.rom for WinXP(800x600)

4. Update BIOS: 61200PL8.rom for Win7(800x600)
5. Update SP-6120,6122,6128_User Manual_M2
6. Update SP-6120,6122,6128_Quick Guide_Q2_(A3)
7. Update WinXP VGA Driver
8. Update Win7 Lan Driver from VER:

Win7_7061_09202012 to VER: Win7_7067_01222013

2018/06/11 Release SP-6120 Driver 1.3

1. Add Wifi Module_ZQ802XRN7-01 Driver.

**** Third party trademarks or brand names are the property of their owners.****