

DRIVER UTILITY CDR_SP-6128 Driver 1.2

All rights reserved. Copyright 2013

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is UTILITY --> VGA --> LAN --> SOUND --> Touch

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\
|

+---->\Flash BIOS\Win7_x86\AFU.bat

+---->\Flash BIOS\WinXP_x86\AFU.bat

|

|

+---->\Platform\Win7,POSReady7(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

|

|

+---->\Platform\Win7,POSReady7(32-bit)\VGA\Setup.exe (Intel GMA3600 Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\VGA\WindowsDriverSETUP.bat (Intel GMA3600 Driver only for windows OS)

|

|

```
+---->\Platform\Win7,POSReady7(32-bit)\LAN\Setup.exe (Realtek
RTL8111F GIGA-LAN Driver only for windows OS)
+---->\Platform\WinXP,POSReady2009(32-bit)\Setup.exe (Realtek
RTL8111F GIGA-LAN Driver only for windows OS)
|
|
+---->\Platform\Win7,POSReady7(32-bit)\Audio\Setup.exe ((Realtek
ALC888S HD Audio Driver only for windows OS)
+---->\Platform\WinXP,POSReady2009(32-bit)\Audio\Setup.exe
((Realtek ALC888S HD Audio Driver only for windows OS)
|
|
+---->\Device\Touch\eGalaxTouch\Setup.exe(eGalaxTouch Driver only
for windows OS)
|
|
+---->\Device\Wifi Module\Spark
LAN\WPER-116GN\Setup.exe(PER-116GN Driver only for windows OS)
```

MANUAL\

```
+---->\AdbeRdr930_en_US.exe (PDF File reader)
```

API Package\

```
+---->\DEMO PROJECT\
|
|
+---->\ProxAPI standard\
|
|
+---->\Document\
```

=====
=====

This CD contains

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for

BIOS update.

a. This is found in CD:\Driver\Flash BIOS\Win7_x86\AFU.bat

b. This is found in CD:\Driver\Flash BIOS\WinXP_x86\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE and "BIOS ROM file

(ex.6128xxxx.rom) (*the flash drive need 4MB free space.)

b. Use flash drive to boot, then type " afudos 6128xxxx.rom /p /b /n /x " and press enter to automatically flash BIOS.

(ex. C:\>afudos 61280P08.rom /p /b /n /x <enter>)

2 The system has LAN function (Realtek RTL8111F Gbe Lan) that can support various network adapters. The content of the LAN driver is found as follows:

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

3 The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

4 Intel Chipset Software Installation Utility.(IntelR System Controller Hub NM10 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

5 The VGA interface (Intel(R) GMA3600 Graphics) is with our system to support LVDS/DVI-I/CRT display.

The following illustration briefly show you the content of VGA driver in sub-directory \VGA\

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

6 eGalaxTouch Driver

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

7 Adobe Acrobat Reader 9.3

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

Revision History

2013/06/07 Release CDR_SP-6122 Driver 1.0

2013/08/27 Release CDR_SP-6122 Driver 1.1

- 1.Add XP Driver
- 2.Add Wifi Driver-WPER-116GN
- 3.Update API package Ver: A01-0000-000-02-130729

2014/03/27 Release CDR_SP-6122 Driver 1.2

1. Update BIOS: 61280D06.rom for WinXP
2. Update BIOS: 61280P08.rom for Win7
3. Update SP-6120,6122,6128_User Manual_M2
4. Update SP-6120,6122,6128_Quick Guide_Q2_(A3)
5. Update WinXP VGA Driver
6. Update Win7 Lan Driver from VER:

Win7_7061_09202012 to VER: Win7_7067_01222013

** Third party trademarks or brand names are the property of their owners.**